The following catalog has gaps in its page numbers, or doesn't have any numbers. We have chosen to leave the page numbering in the order that Acrobat assigns it.



OPERATOR'S MANUAL AND PARTS CATALOG



ELECTRIC GENERATOR SETS FOR RECREATIONAL VEHICLES

SERIES



Redistribution or publication of this document by any means, is strictly prolifered in U.S.A.

PARTS CATALOG

INSTRUCTIONS FOR ORDERING REPAIR PARTS

For parts or service, contact the dealer from whom you purchased this equipment or refer to your nearest Authorized Onan Parts and Service Center.

To avoid errors or delay in filling your parts order, please furnish all information requested.

Always refer to the nameplate on your unit:

1. Always give the MODEL and SPEC NO. and SERIAL NO.

ELEC	Ong TRIC DEL AND S	PLANT
SERIALN		
IMPORTAN	HALWAYS (GIVE ABOVE NOS. DERING PARTS
A C VOLTS		РН
K.V.A	WAT	5
P. F.	AMPS	Hz
D.C. VOLTS		AMPS
WATTS		
R.P.M		BAT
	MANUFACTUE ONAN IN OF ONAN INEAPOLIS, MI MADE IN U ECT. EDUIPME	CORPORATION INNESOTA
	998444	

For handy reference, insert YOUR generator set nameplate information in the spaces above.

- 2. Do not order by reference number or group number, always use part number and description.
- 3. Give the part number, description and quantity needed of each item. If an older part cannot be identified, return the part prepaid to your dealer or nearest AUTHORIZED SERVICE STATION. Print your name and address plainly on the package. Write a letter to the same address stating the reason for returning the part.
- 4. State definite shipping instructions. Any claim for loss or damage to your unit in transit should be filed promptly against the transportation company making the delivery. Shipments are complete unless the packing list indicates items are back ordered.

Prices are purposely omitted from this Parts Catalog due to the confusion resulting from fluctuating costs, import duties, sales taxes, exchange rates, etc.

For current parts prices, consult your Onan Dealer, Distributor or Parts and Service Center.

"En esta lista de partes los precios se omiten de proposito, ya que bastante confusion resulto de fluctuaciones de los precios, derechos aduanales, impuestos de venta, cambios extranjeros, etc."

Consiga los precios vigentes de su distribuidor de productos "Onan".



0.15

This catalog applies to the standard AJ Mobile generating sets as listed below. Parts are arranged in groups of related items. Each illustrated part is identified by a reference number corresponding to the same reference number below the illustration. Parts illustrations are typical. Using the MODEL and SPEC NO. from the set nameplate, select parts from this catalog that apply to your set. Unless otherwise mentioned in the description, parts are interchangeable between models. Right and left sides are determined by FACING the engine end (front) of the set.


PLANT DATA TABLE

	ELECTRICAL DATA						
MODEL AND SPEC NO.	WATTS	VOLTS	HERTZ	WIRE	PHASE		
2.5AJ-1E/*	2500	120	60	2	I		

* The Specification Letter advances (A to B, B to C, etc.) with manufacturing changes.

NOTE: Hertz is a unit of frequency equal to one cycle per second.




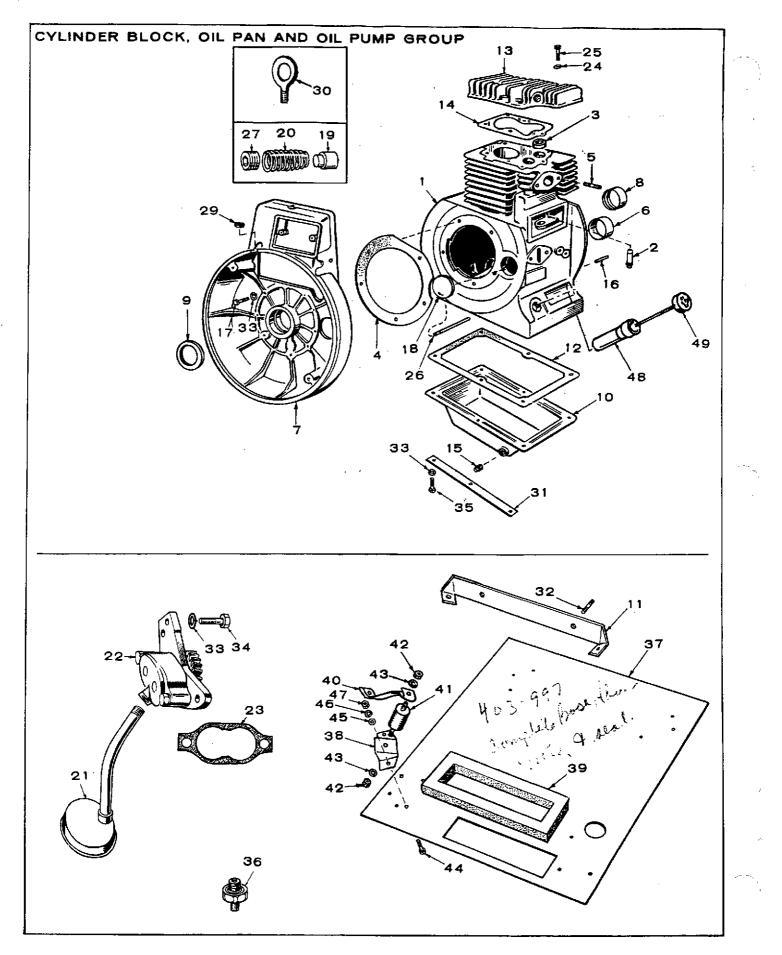



REF. NO.	PART NO.	QTY. USED	PART	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	[10A1941	I	Cylinder Block Assembly	24	526A208	7	Washer, Cylinder Head
			(Includes Parts Marked *)	25	SCREW, HA	RDENED	
2 3	110A441 *INSERT, EX	2 HAUST י	*Guide, Valve VALVE SEAT		110A879	4	Cylinder Head (5/16-18 x 1-1/4 ~)
	110A826 ∐0A826-02		Standard .002 ´´ Oversize		110A284	3	Cylinder Head (5/16-18 x 1-1/2 ")
	110A826-05 110A826-10	1	.005 ″ Oversize .010 ″ Oversize	26	120A387	I	*Tube, Crankcase (Pressed in Block)
4	110A826-25 101K257	 	.025 "Oversize *Gasket Kit, Bearing Plate to Engine (one .015", two	27	505-274	l	Plug, Oil By-Pass (1/8″x 1/4″)
			.006 ″)	29	508A148	L I	Grommet, Generator Adapter
5	520A363	2	Stud, Carburetor Mounting	30	403 A856	1	Bolt, Eye - Lifting
6	101A367	2	*Bearing, Precision Camshaft	. 31	102A689	2	Stiffener, Oil Pan
7	231A159	1	*Plate, Generator Adapter, &	32	520A 🗆 9	2	Stud, Mounting Bracket
			Rear Bearing (Less Bearing)	33	WASHER, L	OCK	
8	*BEARING, PRECISION CRANKSHAFT			850-50	6	Oil Base Mounting	
	(FRONT OR 1018290	REAR) 2	Standard		851-5	5	Generator Adapter and Bearing Plate Mounting
	101B290-02	2	.002″Undersize		850-40	2	Oil Pump Mounting
	101 B290-10	2	.010″Undersize	34	800-7	ĩ	Screw, Hex Cap - Oil Pump
	101B290-20	2	.020 '' Undersize			-	Mounting
	101 B290-30	2	.030 "Undersize	35	806-27	6	Screw, Counter Base - Oil Pan
9	509A123	ī	Seal, Oil - Crankshaft Rear		000 27	Ũ	Mounting
10	102A319	1	Pan, Oil	36	309P237	1	Switch, Oil Pressure
- Lİ	403 D993	i i	Bracket, Engine Mounting	37	403 8991	i	Plate, Mounting - Generator Set
12	102B18	Ì	Gasket, Oil Pan	38	403 8992	4	Bracket, Mounting
13	110D834	Ì	Head, Cylinder	39	134A2426	, I	Seal, Air Scroll
14	110C836	Ì	Gasket, Cylinder Head	40	402A389	4	Strap, Restrainer
15	505-684	1	Plug, 1/4" Oil Drain	41	402A388	4	Mount, Vibration Cushion
16	516A12	2	*Pin, Dowel - Gear Cover Align,	42	862-15	B	Nut, Hex (5/16-18) - Cushion
17	800-29	5	*Screw, Cap - Bearing Plate		OUL IS	D	Mounting
18	517-48	Ē	*Plug, Expansion Rear Cam Bearing	43 44	850-45 800-7	8 8	Washer, Lock (5/16) Screw (1/4-20 x '') - Bracket
19	120A12	1	Plunger, Oil By-Pass		000-7	0	to Plate
20	120A140	i	Spring, Oil By-Pass Plunger	45	526-18	4	Washer, Flat (1/4)
20	120A571	•	Cup and Pipe, Oil Pump	45	850-40	8	Washer, Lock (1/4)
<u> </u>		•	Intake (Includes Screen)	47	862-1		
22	120A394	1	Pump, Oil	47	262-1 123A1066	8	Nut, Hex (1/4-20) *Tube, Oil Fill
22	1204394	1	Gasket Kit, Oil Pump	40	123A1052	1	Cap and Indicator - Oil Fill
23	1201101	I	Graker Kir, On Fump	· · · /	123711732	I	دهب هان indicator - Uli Fill

* - Included in Cylinder Block Assembly.

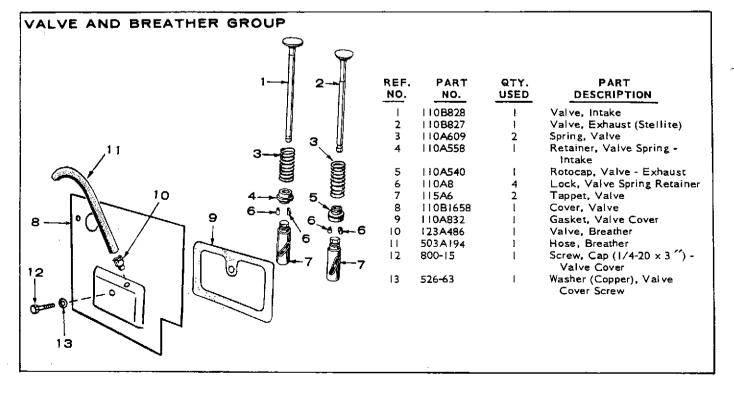




PISTON AND CONNECTING ROD GROUP

.

CRANKSHAFT, CAMSHAFT AND GOVERNOR CUP GROUP

REF. NO.	PART NO.	QTY. USED	
F	104C689	i	Crankshaft
2	104A50	1	Washer, Crankshaft Gear
3	518-12	1	Ring, Lock - Crankshaft Gear Washer
4	105-235	1	Gear Set, Timing (Crankshaft & Camshaft Gear) Includes Flyball Spacer & Plate
5	105A300	1	Camshaft and Pin Assembly
6	150B612	I	Cup, Governor
7	515-1	2	Key, Gear
8	150A78	I	Ring, Lock - Cam Center Pin
9	105A4	· I	Washer, Camshaft Thrust
10	510-15	5	Ball, Fly - Governor
11	150A75	1	Pin, Camshaft Center

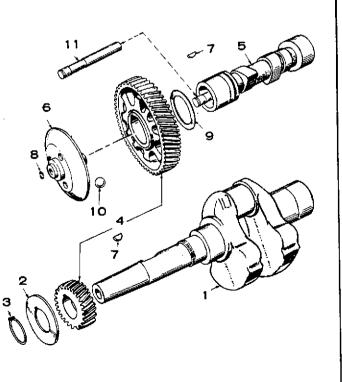


Power Generation

IGNITION GRO	0P	REF.	PART	QTY.	PART
14		<u>NO.</u>	<u>NO.</u>	USED	DESCRIPTION
	$\overline{}$	1	160A555	t	Box Assembly, Breaker
	17 16	2	160 A2	1	Point Set
2		3	312A97	I	Condenser
13		4	167 A 152 I	•	Lead, Spark Plug
		5	67-24 66 B 278	3	Plug, Spark Coil, Ignition
		7	160A558	i I	Nipple, Rubber - Ignition Coil
11 000	12	8	160 B1 04 5	I	Bracket, Ignition Coil Mounting
		9 10	312A58 518-49	 3	Condenser, Suppression Screw, Points & Condenser
3		11	160A553	I	Mounting Plunger & Guide Assembly,
	6 ⁴ A				Breaker
		12	160A551	T	Cover, Breaker Box
		13	160A461	ļ	Gasket, Plunger Guide
		14	160A75	!	Pivot, Breaker Arm
	1 5′	15	160A1143 SCREW, HE		Diaphragm Only, Plunger
		16	SCREW, HE 800-3	x 447 ا	Breaker Box Mounting
			000-3	I I	(1/4-20 x 1/2 ")
	-6 ¹⁶ 18		815-236	I	Coil Bracket Mounting
	6 , , , , , , , , , , , , , , , , , , ,				(5/16-18 × 5/8 ″́)
		17	526 A63	I	Washer (Copper), Flat
	0 =05	18	SCREW, RO	UND HEA	
			166 A286	j	Coil Bracket (#10-24 x
					I-1/2 ")
e e			815-190	I	Condenser Mounting (#8-32 × 3/8 ^{"'})
		19	WASHER, S	HAKEPRO	
	19-18		856-2	I	Condenser Mounting (#8)
	19		853-16	I	Coil Bracket Mounting (5/16 7)
START SOLEN		·		10	
START SOLEN		······································		10 	
START SOLEN		= 2 (2 (2 (2 (2 (2 (2 (2 (2 (2 (2 (2 (2 (10	
START SOLEN		v.c. 2	5	10 	
START SOLEN		= = = = = = = = = = = = = = = =	5		
START SOLEN		= = = = = = = = = = = = = = = =	5		
START SOLEN		+ , , , , , , , , , , , , , , , ,	5		
		9,0	5		
REF. PART (QTY. PART	+ , , , , , , , , , , , , , , , ,	5		
REF. PART (NO. NO. U	RTY. PART JSED DESCRIPTION	+ , , , , , , , , , , , , , , , ,	5		000000000000000000000000000000000000000
REF. PART (NO. NO. U I 191 B708	ATY. PART JSED DESCRIPTION I Plate, Solenoid Mounting	+ , , , , , , , , , , , , , , , ,	5		000000000000000000000000000000000000000
REF. PART (NO. NO. U I 191 B708 2 307 B1031	PART JSED DESCRIPTION Plate, Solenoid Mounting Solenoid, Start (12 Volt)	+ , , , , , , , , , , , , , , , ,	5		000000000000000000000000000000000000000
REF. PART (NO. NO. U I 191 B708 2 307 B1031 3 508-32 A	PART JSED DESCRIPTION I Plate, Solenoid Mounting I Solenoid, Start (12 Volt) s Req. Washer, Insulating	+ , , , , , , , , , , , , , , , ,	Ð		00000
REF. PART (NO. NO. U I 1918708 2 30781031 3 508-32 A 4 304A14	PART JSED DESCRIPTION Plate, Solenoid Mounting Solenoid, Start (12 Volt) s Req. Washer, Insulating 2 Washer, Centering	+ , , , , , , , , , , , , , , , ,	5		of the second se
REF. PART (NO. NO. U I 191 B708 2 307 B1031 3 508-32 A 4 304A14 5 353A28	PART JSED DESCRIPTION I Plate, Solenoid Mounting Solenoid, Start (12 Volt) s Req. Washer, Insulating 2 Washer, Centering I Resistor	+ , , , , , , , , , , , , , , , ,	5		
REF. PART (NO. NO. U I 191B708 2 307B1031 3 508-32 A 4 304A14 5 353A28 6 508P114	PART DESCRIPTION I Plate, Solenoid Mounting Solenoid, Start (12 Volt) s Req. Washer, Insulating 2 Washer, Centering I Resistor I Grommet	+ , , , , , , , , , , , , , , , ,	5		7 18
REF. PART 0 I 191 B708 2 307 B1031 3 508-32 A 4 304A14 5 5 353A28 6 6 508 P114 7 7 305A235	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR		5		
REF. PART Q I 191 B708 U 2 307 B1031 3 3 508-32 A 4 304A14 5 5 353A28 6 6 508 P114 7 7 305A235 3	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR5/16″O.D.				7 18
REF. PART O I 191 B708 U 2 307 B1031 3 3 508-32 A 4 304A14 5 5 353A28 6 6 508 P114 7 7 305A235 8 8 WASHER, INSU 508-16 508-16 508-17	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR5/16"O.D.I1/2"O.D.		5	9	7 18^{17} 12 13^{12} 13^{12} 13^{12} 13^{12}
REF. PART O I 191 B708 U 2 307 B1031 3 3 508-32 A 4 304A14 5 353A28 6 508 P114 7 305A235 8 WASHER, INSU 508-16 508-17 9 308A140	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (I2 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR5/16 ''O.D.I1/2 ''O.D.ISwitch, Ignition		5	9	7 18 ¹⁷
REF. PART Q I 191 B708 2 307 B1031 2 307 B1031 3 508-32 A 4 304A14 5 353 A28 6 508 P114 7 305A235 8 WASHER, INSU 508-16 508-17 9 308A140 10 337A89	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (I2 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR5/16 "O.D.I1/2 "O.D.ISwitch, IgnitionIStrap, Jumper		-10	9	7 18^{17} 12 13^{12} 13^{12} 13^{12} 13^{12}
REF. PART O I 191 B708 U 2 307 B1031 3 3 508-32 A 4 304A14 5 353A28 6 508 P114 7 305A235 8 WASHER, INSU 508-16 508-17 9 308A140	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR1I5/16 "O.D.II/2 "O.D.ISwitch, IgnitionIStrap, Jumper2Screw (1/4-20 x 1/2 ") -	+ 1, - 1, - 2, 	-10	9	7 7 12 13 13 12 13 13 12 13 13 12 18 17 4 18 17 18 18 18 18 18 18 18 18 18 18
REF. PART Q I 191 B708 U 2 307 B1031 3 3 508-32 A 4 304A14 5 5 353A28 6 6 508 P114 7 7 305A235 8 8 WASHER, INSU 508-16 508-17 9 308A140 10 337A89 11 11 800-3 11	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR1I5/16 "O.D.ISwitch, IgnitionIStrap, Jumper2Screw (1/4-20 x 1/2") - Solenoid Mounting			9	7 18^{17} 12 13^{12} 13^{12} 13^{12} 13^{12}
REF. PART 0 I 191 B708 2 307 B1031 3 508-32 A 4 304A14 5 353A28 6 508 P114 7 305A235 8 WASHER, INSU 508-16 508-17 9 308A140 10 337A89 11 11 800-3 12	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR115/16 ''O.D.I1/2 ''O.D.ISwitch, IgnitionIStrap, Jumper2Screw (1/4-20 × 1/2 '') - Solenoid Mounting2Nut (1/4-20)			9	7 7 12 13 13 12 13 13 12 13 13 12 18 17 4 18 17 18 18 18 18 18 18 18 18 18 18
REF. PART 0 I 191 B708 2 307 B1031 3 508-32 A 4 304A14 5 5 353A28 6 6 508 P114 7 7 305A235 8 8 WASHER, INSU' 508-16 508-16 508-17 9 9 302A140 10 10 337A89 11 11 800-3 12 12 860-13 13 13 856-6 508	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR115/16 ''O.D.IStrap, Jumper2Screw (1/4-20 × 1/2 '') - Solenoid Mounting2Nut (1/4-20)2Washer, Lock (1/4)			9	7 7 12 13 13 12 13 13 12 13 13 12 18 17 4 18 17 18 18 18 18 18 18 18 18 18 18
REF. PART O I 191 B708 U 2 307 B1031 3 3 508-32 A 4 304A14 5 353A28 6 508 P114 7 305A235 8 WASHER, INSU 508-16 508-17 9 308A140 10 337A89 11 11 800-3 12 12 860-13 13 13 856-6 14	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR115/16 ''O.D.I1/2 ''O.D.ISwitch, IgnitionIStrap, Jumper2Screw (1/4-20 × 1/2 '') - Solenoid Mounting2Nut (1/4-20)				$ \begin{array}{c} 7 \\ 7 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 10 \\ 9 \\ 10 \\ 1$
REF. PART O I 191 B708 U 2 307 B1031 3 3 508-32 A 4 304A14 5 5 353A28 6 6 508 P114 7 7 305A235 8 8 WASHER, INSU 508-16 508-16 508-17 9 9 308A140 10 10 337A89 11 11 800-3 12 12 860-13 13 13 856-6 14 14 526-1512 15	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR1I5/16 ''O.D.I1/2 ''O.D.ISwitch, IgnitionIStrap, Jumper2Screw (1/4-20 x 1/2 '') - Solenoid Mounting2Nut (1/4-20)2Washer, Lock (1/4)2Washer, Flat (1/4)IScrew (10-32 x 2-1/2 '') - Resistor Mounting				7 7 12 13 13 12 13 13 12 13 13 12 18 17 4 18 17 18 18 18 18 18 18 18 18 18 18
REF. PART O I 191 B708 U 2 307 B1031 3 3 508-32 A 4 304A14 5 353A28 6 508 P114 7 305A235 8 WASHER, INSU 508-16 508-17 9 308A140 10 337A89 11 11 800-3 12 12 860-13 13 13 856-6 14	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR115/16 "O.D.I1/2 "O.D.ISwitch, IgnitionIStrap, Jumper2Screw (1/4-20 x 1/2") - Solenoid Mounting2Nut (1/4-20)2Washer, Lock (1/4)2Washer, Flat (1/4)IScrew (10-32 x 2-1/2") - Resistor MountingIWasher, Lock (#10)				$ \begin{array}{c} 7 \\ 7 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 10 \\ 9 \\ 10 \\ 1$
REF. PART Q I 191 B708 U 2 307 B1031 3 3 508-32 A 4 304A14 5 5 353A28 6 6 508 P114 7 7 305A235 8 WASHER, INSU 508-16 508-17 9 308A140 10 337A89 11 800-3 12 860-13 13 856-6 14 526-1512 15 813-112 16 853-8 17 870-1053	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR1I5/16 "O.D.IStrap, Jumper2Screw (1/4-20 × 1/2") - Solenoid Mounting2Nut (1/4-20)2Washer, Lock (1/4)2Washer, Flat (1/4)1Screw (10-32 × 2-1/2") - Resistor MountingIWasher, Lock (#10)2Nut, Hex (#10-32)				$ \begin{array}{c} 7 \\ 7 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 10 \\ 9 \\ 10 \\ 1$
REF. PART Q I 191 B708 2 307 B1031 3 508-32 A 4 304A14 5 353A28 6 508 P114 7 305A235 8 WASHER, INSU 508-16 508-17 9 308A140 10 337A89 11 800-3 12 860-13 12 860-13 13 856-6 14 526-1512 15 813-112 16 853-8 17 870-1053 18 850-1030 850-1030	PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR115/16 "O.D.IStrap, Jumper2Screw (1/4-20 × 1/2") - Solenoid Mounting2Nut (1/4-20)2Washer, Lock (1/4)2Washer, Flat (1/4)1Screw (10-32 × 2-1/2") - Resistor MountingIWasher, Lock (#10)2Nut, Hex (#10-32)1Washer, Lock (#10)				$ \begin{array}{c} 7 \\ 7 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 10 \\ 9 \\ 10 \\ 1$
REF. PART Q I 191 B708 U 2 307 B1031 3 3 508-32 A 4 304A14 5 5 353A28 6 6 508 P114 7 7 305A235 8 WASHER, INSU 508-16 508-17 9 308A140 10 337A89 11 800-3 12 860-13 13 856-6 14 526-1512 15 813-112 16 853-8 17 870-1053	ATY.PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR115/16 "O.D.IStrap, Jumper2Screw (1/4-20 x 1/2") - Solenoid Mounting2Nut (1/4-20)2Washer, Lock (1/4)2Washer, Flat (1/4)1Screw (10-32 x 2-1/2") - Resistor Mounting1Washer, Lock (#10)2Nut, Hex (#10-32)1Washer, Lock (#10)2Switch, (1) Momentary,				$ \begin{array}{c} 7 \\ 7 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 10 \\ 9 \\ 10 \\ 1$
REF. PART Q I 191 B708 U 2 307 B1031 3 3 508-32 A 4 304A14 5 5 353A28 6 6 508 P114 7 7 305A235 8 8 WASHER, INSU 508-16 508-17 9 308A140 10 337A89 11 11 800-3 12 12 860-13 13 13 856-6 14 14 526-1512 15 15 813-112 16 16 853-8 17 17 870-1053 18	PARTJSEDDESCRIPTIONIPlate, Solenoid MountingISolenoid, Start (12 Volt)s Req.Washer, Insulating2Washer, CenteringIResistorIGrommetIRectifierLATOR115/16 "O.D.IStrap, Jumper2Screw (1/4-20 × 1/2") - Solenoid Mounting2Nut (1/4-20)2Washer, Lock (1/4)2Washer, Flat (1/4)1Screw (10-32 × 2-1/2") - Resistor MountingIWasher, Lock (#10)2Nut, Hex (#10-32)1Washer, Lock (#10)				$ \begin{array}{c} 7 \\ 7 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 9 \\ 13 \\ 10 \\ 9 \\ 10 \\ 1$



-- ~.

· · · · ·

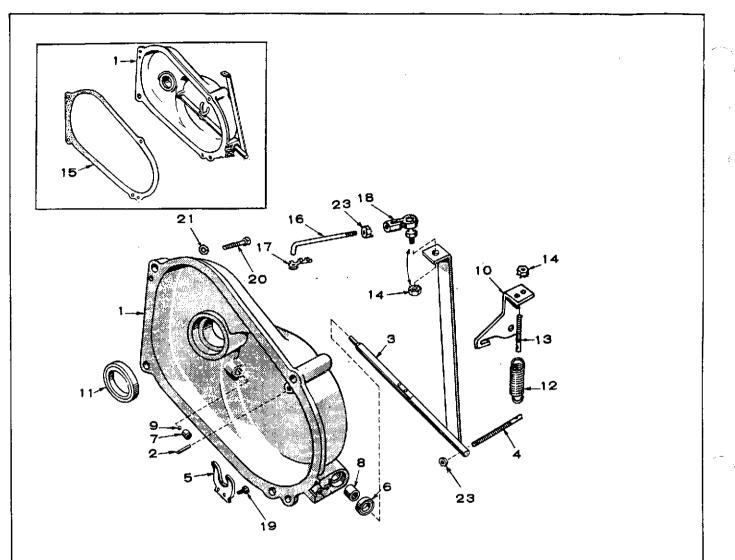

GEAR COVER GROUP


REF. NO.	PART NO.	QTY. USED	
Ι	103C320	I	Cover Assembly, Gear - (Includes Parts Marked *)
2	516-117	I	*Pin, Roll (3/16 x 13/16") Governor Cup Stop
3	50A1221	1	*Arm & Shaft, Governor
4	150AI77	1	*Stud, Governor Sensitivity Adjusting
5	150B1187	I	*Yoke, Governor Shaft
6	509-8	I	*Seal, Oil - Governor Shaft
7	510-8	I	*Bearing, Governor Shaft-Lower
8	510-13	1	*Bearing, Governor Shaft-Upper
9	510-14	1	*Ball, Governor Shaft Thrust
10	150A1224	I	Bracket, Governor Spring
11	509-12	I	*Seal, Crankshaft Oil, Front
12	150A98	T	Spring, Governor
13	150A213	1	Stud, Gov. Spring Tension Adjusting

.

REF. NO.	PART NO.	QTY. USED	
14	870-131	2	Nut, Keps
15	103813	1	Gasket, Gear Cover
16	I 50A786	I	Link, Governor Arm to Carburetor
17	518-4	i	Clip, Governor Link to Carb.
18	50A974	1	joint, Ball
19	815-46	2	*Screw, Governor Yoke Mounting
20	SCREW, HEX	K CAP - G	EAR COVER MOUNTING
	800-32	2	5/16-18 x 1-3/4"
	800-34	2	5/16-18 x 2-1/4"
21	850-45	4	Washer, Lock - Gear Cover Mounting
23	870-53	2	Nut, (1) *Governor Stud and (1) Governor Link

* - Included in Gear Cover Assembly.




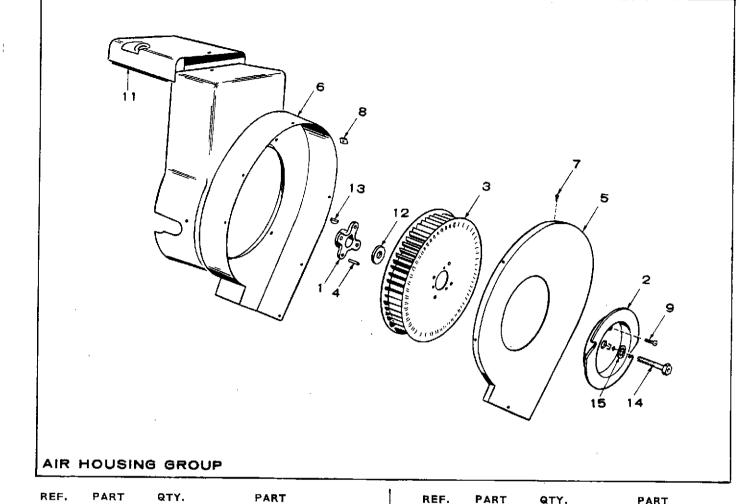

REF.	PART NO.	QTY. USED	PART	REF NO.		QTY. USED	PART DESCRIPTION
1	134C1913	I	Hub	8	870-120	8	Nut, Speed - J Type
2	192B370	ł	Sheave, Rope	9	821-10	2	Screw, Round Head, (1/4-20 x
3	134A1924	1	Wheel, Blower	,	027 10	~	5/8")
4	516-91	2	Pin, Groove ~ Sheave and	11	134D1904	1	Shroud, Cylinder Air
			Blower Wheel-to-Flywheel	12	526-17	I I	Washer, Hub Mounting
			Hub	13	515A113	L	Key, Hub
5	134D2657		Cover, Air Scroll	14	104A690	1	Screw, Hub Mounting
6	134D2656	I	Housing and Scroll, Blower	15	850-55	i	Washer, Lock (7/16")
7	809-43	8	Screw, Sheet Metal (#10 x 3/8 ")	12		1	(1/10)



. ---.

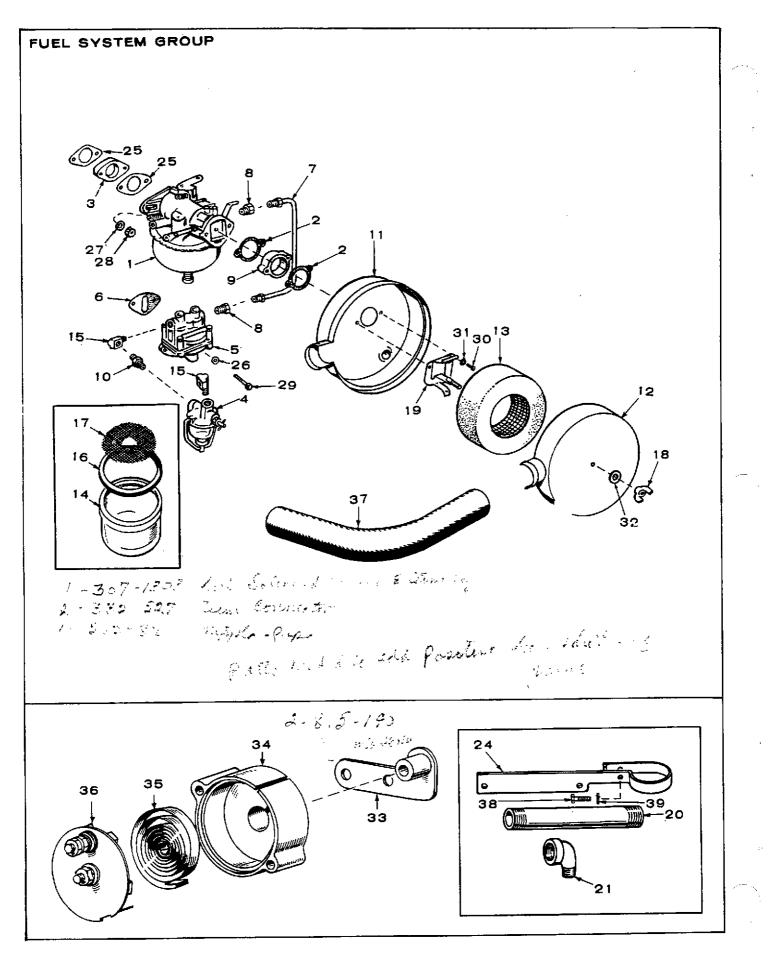

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO,	QTY. Used	PART
1	146C140	1	*Carburetor				
2	140A1142	2	Gasket, Air Cleaner to				
			Carburetor	24	155B1006	1	Bracket, Exhaust Pipe
3	145A110	I	Gasket, Spacing - Carburetor	25	141A78	2	Gasket, Carburetor Mounting
			Flange	2 6	526A63	2	Washer, Fuel Pump Mounting
4	149B79	1	Filter, Fuel	27	853-13	2	Washer, Lock - Carburetor
5	149D1180	1	Pump, Fuel				Mounting
6	149A3	1	Gasket, Pump Mounting	28	868-1	2	Nut, Hex - Carburetor Mtg.
7	149A1110	I	Line, Fuel Pump to Carburetor	29	815-111	2	Screw, Fuel Pump Mounting
8	502-3	2	Connector (1) Carburetor Inlet (1) Pump Outlet	30	812-84	2	Screw (8-32 x 1") - Air Cleaner Mounting
9	146-163	I	Spacer, Air Cleaner to Carb.	31	850-25	2	Washer, Lock (#B)
10	502-82	I	Nipple, Filter Mounting	32	526-48	1.1	Washer, Flat
11	40 B I 0 26	1	Cleaner, Air - Bottom	33	153A420	ł	Adapter, Electric Choke
12	140B1021	1	Cover, Air Cleaner	34	153A58	I	Bracket, Electric Choke
13	140A1031	i	Element and Retainer, Air	35	153A17	1	Element, Choke Bimetal
14	149-150	1	Cleaner Bowl, Fuel Filter	36	153A115	I	Cover Assembly, Choke (32 Volt Element)
15	502-20	2	Elbow, Street (1/8") Pipe	37	503 A56 I	1	Hose. Air Cleaner
16	149A149	ī	Gasket, Filter Bowl	38	800-4	i	Screw (1/4-20 x 5/8") - Exhaust
17	49-202		Screen, Fuel Filter				Bracket
18	865P21	i	Nut, Wing - Air Cleaner	39	850-40	1	Washer, Lock (1/4)
19	140B1020	i	Spacer, Air Cleaner				·····
20	505-754	i i	Nipple. Pipe - Exhaust	* - Se	e separate g	roup for co	mponent parts.
20	505-754		$(3/4 \times 6^{\prime\prime})$		· -	•	by Onan. Order from vehicle
21	505-5	Ι	Elbow, Street $(3/4 \times 90^{\circ})$		manufactur		· · · · · · · · ·

FUEL PUMP PARTS GROUP


REF. NO.	PART NO.	QTY. USED	PART
	149D1180	1	Pump, Fuel (Illustrated in Fuel System Group)
	149K526	I	Repair Parts Kit (Includes Parts Marked *)
1		1	Body, Not Sold Separately
2 3	815-148	4	Screw, Machine (#8-32 x 7/8 ")
3	815-147	2	Screw, Phillips, Self Tapping (#6-32 x 5/8 ["]) - Valve Retainer
4	149-96	2	*Valve and Cage
5	149A95	2	*Gasket, Valve
6	149A582	l	*Diaphragm Assembly
7	149A672	I	*Spring
8	149A539	I.	Retainer, Valve Cage
9	149A675	I	*Spring
10	516A113	I	Pin, Rocker Arm
11		t	Body, Not Sold Separately
12	49-710	L	Link and Arm, Rocker (Sold Only As A Set)
13	149A3	L	*Gasket, Pump Mounting
14	149A858	1	*Gasket, Diaphragm - Lower Side

* - Included in Repair Kit.




·-· . .

CARBURETOR (WALBRO) PARTS GROUP

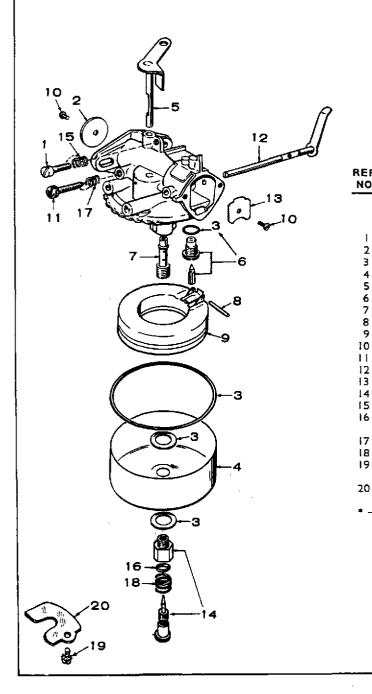

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	46C140		Carburetor, Gasoline
	146P149	i	Repair Kit, Carburetor (Includes
		-	Parts Marked *)
I	146P122	1	Screw, Throttle Stop
2	146P119	Í	Valve, Throttle
3	46P124	I	*Gasket Kit, Carburetor
4	46P118	1	Bowl, Fuel
5	146P112	L L	Shaft Assembly, Throttle
6	146P145	I	*Float Valve, Seat & Gasket Pkg.
7	146P113	I	Nozzie
8	146PIII	I	*Shaft, Float
9	146P110	I	Float Assembly
10	146P109	2	Screw & Washer
11	146P116	I	*Needle, Idle
12	146P107	I	Shaft Assembly, Choke
13	146P104	I	Valve, Choke
14	146P102	1	*Needle Assembly, High Speed
15	146P121	1	Spring, Throttle Stop Screw
16	146P120	1	Seal, "O" Ring - Hìgh Speed Needle
17	146P114	I	Spring, Idle Needle
18	146P117	I	Spring, High Speed Needle
19	146 P 142	I	Screw Assembly & Washer - Splash Baffle Mounting
20	146P143	I.	Baffle, Splash
* - {n	cludes in R	epair Kit.	

Generation

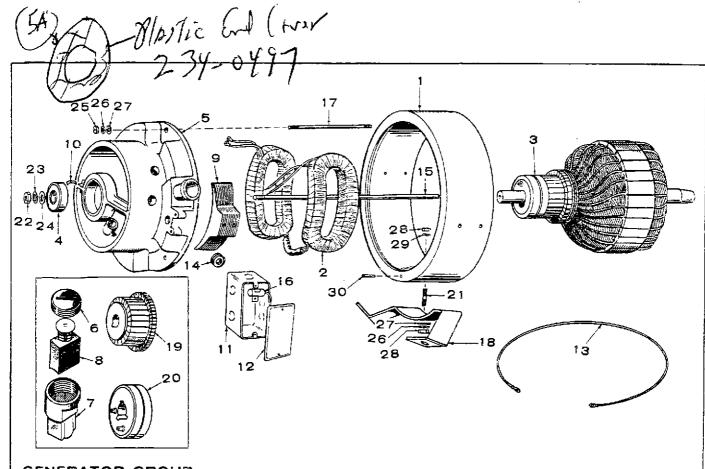

GENERATOR GROUP


REF. NO.	PART NO.	QTY. USED	PART	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	210C411		Frame, Machined & Drilled – Less Coils & Poleshoes	14 15	508-26 520A698		Grommet, Outlet Box Stud, Armature Through
2	222A1728	I	Coil Assembly, Field	16	CONDENSER	-	
3	201D1566		(2 Coils Wired Together) Armature Assembly, Includes		312A180	2	Prior to Serial #493324 During Spec K
2	20101066	i	Bearing		312A195	i	Begin Serial #493324
4	510A47	1	Bearing, Ball - Armature		•		During Spec K
5	2110173	1	Bell, End	17	520 A35 i	2	Stud, Generator Frame-to-
6	CAP, BRUS	H HOLDE					Engine
	212A1219	2	DC Brush	18	403B994	1	Support, Generator Mounting
	212A1217	4	AC Brush	19	203 A I 48	1	Commutator (DC)
7	HOLDER, E	BRUSH		20	20489	1	Collector Ring (AC)
	212A1218	2	DC Brush	2!	520 A 1703	1	Stud. Generator Mounting
	212A!216	4	AC Brush				Support
8	BRUSH			22	862-3		Nut, Hex (3/8-16) - Armature Stud
	214A93	2	DC	23	850-50	1	Washer, Lock (3/8)
_	214A92	4	AC	24	526-13	1	Washer, Flat (3/8)
9	221C156	2	Shoe, Pole	25	862-1015	2	Nut, Hex (5/16-18) -
10	232A596	1	Clip, Bearing	22	002-1015	-	Generator Through Stud
11	330A68	1	Box, Outlet	26	850-45	3	Washer, Lock (5/16)
12	330-4	1	Cover, Receptacle	27	526-115	3	
13	336A1845	I	Lead Assembly, Ground	25	862-1015	2	Washer, Flat (5/16)
<i>.</i>	5 × 24 · ·	40	Cover and weld '	23	862-1015	2	Nut, Hex (5/16-18) - Generator Support Mountin
1. 1	-2374	77 🕴	LOHA CANA AND	29	856-1008	ł	Washer, Lock (5/16)
	·			30	516P103	2	Pin, Roll - End Bell Alignment

SERVICE KITS & MISCELLANEOUS

NOTE: For other kits, refer to the group for the part in question.

REF. NO.	PART NO.	QTY. USED	
	98C1100	I	Decal Kit
	168K118	I.	Gasket Kit, Set
	522K263	I	Overhaul Kit, Set
	525P137	I	Paint, Touch-up Enamel (Green)
			16 oz, Pressurized Can



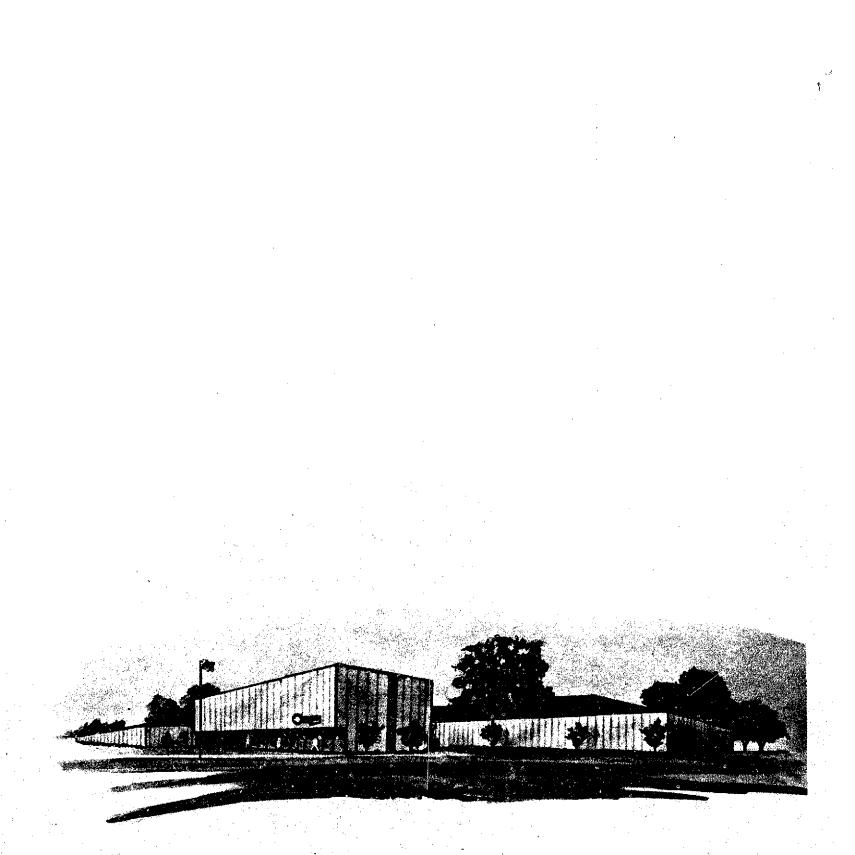

1400 73RD AVENUE N.E. • MINNEAPOLIS, MINNESOTA 55432 A DIVISION OF ONAN CORPORATION **ONAN**







Redistribution or publication of this document by any means, is strictly prohibited.

900-182

SUPPLEMENTARY PARTS LIST (7/73)

These parts apply to the following series Electric Power Plants for Recreational Vehicles and the Operators Manual and Parts Catalog shown adjacent to the model designation. Use these parts in place of or in addition to those shown in the main ' operators manual and parts catalog.

*	MODEL		OPERATORS MANUAL AND PARTS CATALOG	
	AJ		924-310	
	BF (Power	Drawer)	965-0315	
	CCK	- · · · ·	927-310	
	CCKB		927-303	
	LK		930-310	· · ·
	NH	4	940-310	I
	NH (Power 1	Drawer)	940-0315	-
	52	3 12 28	54	
		FUEL SYST	rem group	÷
REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	
3	501-204	1	Line, Fuel (NH)	
3 12	501-204 501-0001	1	Line, Fuel (NH) Line, Fuel (BF and NH Power Drawer)	
3 12 28		1 1 1 1		
12	501-0001	1 1 1 1 1 1	Line, Fuel (BF and NH Power Drawer)	· · · ·
12 28	501-0001 501-204		Line, Fuel (BF and NH Power Drawer) Line, Fuel (CCK) Valve, Fuel Solenoid Nipple, Pipe (AJ, CCKB and LK)	
12 28 52	501-0001 501-204 307P1279		Line, Fuel (BF and NH Power Drawer) Line, Fuel (CCK) Valve, Fuel Solenoid	

E1

main parts catalog.



ower

Generation

MODEL 2.5AJ-1E

SPEC. 10898K

SUPPLEMENTARY PARTS LIST 900- 43 (per above model and spec.) Parts listed below apply to the above model. Use these parts in place of (or in addition to) the parts listed for Parts Key______ in the standard parts catalog No.______

PART NO.	QUAN.	DESCRIPTION
103A319 505-130 503A271 146C140 146P104 146P107 140A1142 153A420 140A1164 153A58 153A17 153A115	1 1 1 1 1 1 1 1 1 1 1 1 1 1	Pan, Oil Plug, Oil Fill Hose, Breather Carburetor Valve, Choke (Carb.) Shaft Assy., Choke (Carb.) Gasket, Air Cleaner to Carburetor Adapter, Choke Cleaner, Air - Bottom - Includes Spacer § Breather Inlet Tube Bracket, Choke Element, Choke Cover, Choke
		a
· · · · · · · · · · · · · · · · · · ·		•

10/20/71

. Revised_

F2

P.a.g. 1 P.a.g. 1 Streadistribution or publication of this document by any means, is strictly prohibited. SPECIAL PARTS LIST FOR MODEL _____ 2.0AJ-52E

12006K

FOR STANDARD PARTS REFER TO CATALOG 924-0310 KEY NO. _-

(PARTS CATALOG ALSO CONTAINS COMPONENTS FOR MAJOR OPTIONAL FEATURES LISTED BELOW)

WIRING DIAGRAM NO

605-0110-01

		WIRING DIA	GRAM NO.	60	5-0110-01	
PART NO.	QTY	DESCRIPTION	PART NO.	QTY.	DESCRIPTIC	DN N
		•.	1			
520-0632	2	Stud, Carburetor Mtg. (1/4" x 1-1/2")				
307-1279	1	Valve, Fuel Solenoid				
502-0082	2	Nipple, Hex - (1) Filter Inlet (1) Filter Outlet				
505-0165	1	Nipple, Exhaust (3/4"x5-1/2")				
134-3080	1	Guard, Scroll Outlet				
145-0469	1	Plate, Carburetor Mounting				
332-0527	3	Terminal, Wire - (1) Choke Cover Wire (1) Positive Coil Lead (1) Suppression Condenser Mounting Screw	·	,		·
353-0028	2	Resistor, Start Solenoid				
304-0014	3	Washer, Centering - Resistor				
332-0142	1	Terminal, Ground - Solderless				
337-0094	1	Strap, Ground				
402-0144	1	Mount, Rubber (1" OD x 7/16" ID x 1-1/4" LG)			- 'a g	
520-0831	• 1	Stud, Armature Through (11-9/16" LG)			κ.	
234-0497	1	Cover, End Bell				
508-0148	1	Grommet, Rubber - Generator Lead (3/8" Hole)		·		
214-0100	2	Brush (DC)				
222-1807	1	Coil Assembly, Field				
201-2318	1	Armature Assembly				
•		,				
		. (
				i		
		· · · ·				
		No. 1997				
	10 10 10 10 10 10 10 10 10 10 10 10 10 1					

C2

Dec 1.

Dated

1978

SPECIAL PARTS LIST FOR MODEL _____2.5AJ-1E

aternue 1, 1978

Generation

_____ SPEC _______

1

cument

LO allo

by any means, is strictly prohibited.

1

Page

FOR STANDARD PARTS REFER TO CATALOG 924-0310 KEY NO. _-

(PARTS CATALOG ALSO CONTAINS COMPONENTS FOR MAJOR OPTIONAL FEATURES LISTED BELOW)

		WIRING DIA	605-	0110-01	
PART NO.	QTY.	DESCRIPTION	PART NO.	QTY.	DESCRIPTION
			Î	ſ	
520-0632	2	Stud, Carburetor Mtg (1/4" x 1-1/2")			
307-1279	1	Valve, Fuel Solenoid			
502-0082	2	Nipple, Hex - (1) Filter Inlet (1) Filter Outlet			
505-0165	1	Nipple, Exhaust (3/4" x 5-1/2")			,
134-3080	ī	Guard, Scroll Outlet			
145-0469	1	Plate, Carburetor Mounting			
332-0527	3	Terminal, Wire - (1) Choke Cover Wire (1) Positive Coil Lead (1) Suppression			
		Condenser Mounting Screw			
353-0028	2	Resistor, Start Solenoid			
304-0014	3	Washer, Centering - Resistor			1
332-0142	1	Terminal, Ground - Solderless			
337-0094	1	Strap, Ground			
402-0144	1	Mount, Rubber (1" OD x 7/16" ID X 1-1/4" LG)			
234-0497	1	Cover, End Bell			
508-0148	1	Grommet, Rubber - Generator Lead (3/8" Hole)			arr.
214-0100	2	Brush (DC)		e	
201-2293	1	Armature Assembly			•
520-0831	1	Stud, Armature Through (11-9/16" LG)			

Revised

F4

SPECIAL PARTS LIST FOR MODEL 2.0AJ-52E SPEC 12006M

FOR STANDARD PARTS REFER TO CATALOG 924-0310 KEY NO. _-

(PARTS CATALOG ALSO CONTAINS COMPONENTS FOR MAJOR OPTIONAL FEATURES LISTED BELOW)

WIRING DIAGRAM NO. _____605-0110-01

PART NO.	QTY.	DESCRIPTION	PART NO.	QTY.	DESCRIPTION
		T	1		
520-0632	2	Stud, Carburetor Mtg.			
	-	$(1/4" \times 1-1/2")$			
307-1279	¥	Valve, Fuel Solenoid			
502-0082	2	Nipple, Hex - (1) Filter Inlet			
		(1) Filter Outlet			
505-0165	1	Nipple, Exhaust (3/4"x5-1/2")			
134-3080	1	Guard, Scroll Outlet			
145-0469	1	Plate, Carburetor Mounting			
332-0527	Ĵ	Terminal, Wire - (1) Choke Cover Wire (1) Positive Coil Lead (1) Suppression Condenser Mounting Screw			
353-0028	2	Resistor, Start Solenoid			
304-0014	3	Washer, Centering - Resistor			
332-0142	1	Terminal, Ground - Solderless			
337-0094	1	Strap, Ground			
520-0831	1	Stud, Armature Through (11-9/16" LG)			:
234-0497	1	Cover, End Bell			
508-0148	1	Grommet, Rubber - Generator Lead (3/8" Hole)			
214-0100	2	Brush (DC)			
222-1807	1	Coil Assembly, Field			
201-2318	1	Armature Assembly			
		ł			
•					
					· · ·
ins Do	WOF -	1 1070 -			1 1
cum Dated	nerati	1, 1978 Revised			Page distlibution or publication of this document
		. F5			

SPECIAL PARTS LIST FOR MODEL _____2.5AJ-1E

_____ SPEC ______12006M

FOR STANDARD PARTS REFER TO CATALOG 924-0310 KEY NO. _-__

(PARTS CATALOG ALSO CONTAINS COMPONENTS FOR MAJOR OPTIONAL FEATURES LISTED BELOW)

WIRING DIAGRAM NO. ______ 605-0110-01____

		WINING DIA	GRAM NU		605-0110-01
PART NO.	QTY.	DESCRIPTION	PART NO.	QTY.	DESCRIPTION
			1	T	
520-0632	2	Stud, Carburetor Mtg. (1/4" x 1-1/2")			
307-1279	1	Valve, Fuel Solenoid			
502-0082	2	Nipple, Hex - (1) Filter Inlet (1) Filter Outlet			
505-0165	1	Nipple, Exhaust (3/4"x5-1/2")			
134-3080	1	Guard, Scroll Outlet			
145-0469	1	Plate, Carubretor Mounting			
332-0527	3	Terminal, Wire - (1) Choke Cover Wire (1) Positive Coil Lead (1) Suppression Condenser Mounting Screw			
353-0028	2	Resistor, Start Solenoid			
304-0014	3	Washer, Centering - Resistor			!
332-0142	1	Terminal, Ground - Solderless			
337-0094	1	Strap, Ground			
234-0497	1	Cover, End Bell			
508-0148	1	Grommet, Rubber - Generator Lead (3/8" Hole)			r
214-0100	2	Brush (DC)			
201-2293	1	Armature Assembly			
520-0831	1	Stud, Armature Through (11-9/16" LG)			
				·	
Date	Dec	<u>1, 1978</u> Revised		. 1	Pageadistribution or pub aftion of this documer
	enerat				by any means, is strictly prohibited.

SPECIAL PARTS LIST FOR MODEL ____

Z.JAJ-1E

TOOOK

SPEC 924-0310

Page

Jublication

by any means, is strictly prohibited.

+ ocument

KEY NO. ___

FOR STANDARD PARTS REFER TO CATALOG (PARTS CATALOG ALSO CONTAINS COMPONENTS FOR MAJOR OPTIONAL FEATURES LISTED BELOW)

WIRING DIAGRAM NO. _

605-0110-01

PART NO.	QTY.	DESCRIPTION	PART NO.	QTY.	DESCRIPTION
			T		
520-0632	2	Stud, Carburetor Mtg. (1/4" x 1-1/2")			
307-1279	1	Valve, Fuel Solenoid			
502-0082	2	Nipple, Hex - (1) Filter Inlet (1) Filter Outlet			
505-0165	1	Nipple, Exhaust (3/4" x 5-1/2")			
134-3080	1	Guard, Scroll Outlet			
145-0469	1	Plate, Carburetor Mounting			
332-0527	3	Terminal, Wire - (1) Choke Cover Wire (1) Positive Coil Lead (1) Suppression Condenser Mounting Screw			
353-0028	2	Resistor, Start Solenoid			
304-0014	3	Washer, Centering - Resistor			
332-0142	1	Terminal, Ground - Solderless			
337-0094	1	Strap, Ground			
402-0144	1	Mount, Rubber (1" OD x 7/16" ID x 1-1/4"LG)			
234-0497	1	Cover, End Bell			
508-0148	1	Grommet, Rubber - Generator Lead (3/8" Hole)			
214-0100	2	Brush (DC)			
201-2293	1	Armature Assembly			
520-0831	1	Stud, Armature Through (11-9/16" LG)			
403-1049	1	Plate, Mounting - Generator Set			



Generation

Revised

F7

SPECIAL PARTS LIST FOR MODEL ___

2.5AJ-1E

13036M

FOR STANDARD PARTS REFER TO CATALOG 924-0310 KEY NO. ___

(PARTS CATALOG ALSO CONTAINS COMPONENTS FOR MAJOR OPTIONAL FEATURES LISTED BELOW)

WIRING DIAGRAM NO. 605-0110-01

__ SPEC

			IGRAM NO			
PART NO.	QTY.	DESCRIPTION	PART NO.	ΩΤΥ.	DESCRIPTION	
		•	,	1		
520-0632	2	Stud, Carburetor Mtg. (1/4" x 1-1/2")				
307-1279	1	Valve, Fuel Solenoid				
502-0082	2	Nipple, Hex (1) Filter Inlet				
		(1) Filter Outlet				
505-0165	1	Nipple, Exhaust (3/4"x5-1/2")				
134-3080	1	Guard, Scroll Outlet				
145-0469	1	Plate, Carburetor Mounting				
332-0527	3	Terminal, Wire - (1) Choke Cover Wire (1) Positive Coil Lead (1) Suppression Condenser Mounting Screw				
353-0028	2	Resistor, Start Solenoid				
304-0014	3	Washer, Centering - Resistor				
332-0142	1	Terminal, Ground - Solderless				
337-0094	1	Strap, Ground				
234-0497	1	Cover, End Bell				
508-0148	1	Grommet, Rubber - Generator Lead (3/8" Hole)				
214-0100	2	Brush (DC)				
301-2293	ī	Armature Assembly				
320-0831	1	Stud, Armature Through				: . 4
403-1049	1	(11-9/16" LG) Plate, Mounting - Generator				
		,				
		1				
		4				
		· 1				
Datedo	Dec	<u>1, 1978</u> Revised		Da	1 IG&distribution or public lien of th	ta ala
cum Ge	enerat			, ra	by any means, is strictly prohibite	no a ocumen ed.
		F8	5		, ,, , p	